

# PAK TO PAK PARTS MANUAL

**HEATH**

**CUSTOM PRESS**  
equipment • service • supplies

MANUAL PART NUMBER B4960

**Copyright 1999 Heath Custom Press Company.** All rights reserved. This manual may not be duplicated, reproduced or transmitted (in whole or in part) in any form or by any means, electronic or mechanical, (including without limitation photocopy, facsimile, recording or any information storage and retrieval system) without prior written consent of Heath Custom Press Company.

**Disclaimer of Warranties (Express or Implied).** While due care has been taken in the preparation of this manual, Heath Company makes no representation or warranties with respect of the adequacy or accuracy hereof and specifically disclaims any implied warranties of merchantability or fitness for any particular purpose. Further, Heath Custom Press Company reserves the right to revise this publication and to make changes (both substantial and insubstantial in nature) in the contents hereof from time to time hereafter without obligation of Heath Custom Press Company to notify any person or organization of such revisions or changes.

**Safety Warning.** Safety devices have been installed for your protection and safety. The removal, disconnection or alteration of any safety guard, protective cover, safety interlock or other safety or protective device comprising part of the equipment described herein poses an undue safety hazard.

**Disclaimer of Liability.** Heath Custom Press Company disclaims any responsibility or liability for personal injury, death or property damage caused by or arising out of (1) the removal, disconnection or alteration of any safety guard, protective cover, safety interlock or other safety or protective device equipment described herein or servicing or repairing the same to observe all operating and safety procedures and warnings contained herein.


#### WARNING

1. This manual may not be copied partially or fully without the permission of Heath Customer Press Company.
2. The contents of this manual are subject to change without notification,.
3. This manual's contents have been carefully checked but if you notice something that is unclear, a mistake, or something left out, please contact Heath Custom Press Company.
4. We are not responsible for any machine poor operation results.



# Contents

1	<b>Splice Conveyor</b>	
	Splice Table Assembly . . . . .	10
2	<b>Main Offset</b>	
	Impression Cylinder . . . . .	14
	Blanket Cylinder . . . . .	16
	Blanket Clamp . . . . .	18
	Carrier Blanket . . . . .	20
	Plate Cylinder . . . . .	22
	Plate Clamp . . . . .	24
	Dampener . . . . .	26
	Dampener Oscillator . . . . .	30
	Dampener Hold Down . . . . .	32
	Dampener Drive . . . . .	34
	Offset Roller Layout . . . . .	36
	Keyed Ink Fountain . . . . .	38
	Operator Side View . . . . .	40
	Solenoid Bank . . . . .	44
	Operator Inner Side View . . . . .	46
	Gear Side View . . . . .	48
	Oscillator Gear Box . . . . .	50
	Gear Innerside View . . . . .	54
	Form Roller Support, Operator . . . . .	56
	Form Roller Support, Gear . . . . .	58
	Operator Station . . . . .	60
	Gear, Impression Cylinder . . . . .	60
	Bushing Housing . . . . .	62
	Ductor Arm . . . . .	64
	Operator Station "A" . . . . .	66
	Spring Bar . . . . .	66
	Air Cylinder, Ductor . . . . .	68
	Air Cylinder, Dampener . . . . .	68
	Air Cylinder, Impression . . . . .	70
	Alkon Valve, Offset . . . . .	72
	Web Roller . . . . .	72
3	<b>Second color Offset</b>	
	Plate Cylinder . . . . .	76
	Plate Clamp . . . . .	78
	Dampener Second Color . . . . .	80
	Dampener, Oscillator Roller . . . . .	84
	Dampener Drive . . . . .	86
	Roller Layout . . . . .	88
	Keyed Ink Fountain . . . . .	90
	Operator Side View . . . . .	92
	Oscillator Gear Box . . . . .	94
	Air Cylinder, Impression . . . . .	96
	Operator Station . . . . .	98
	Air Cylinder, Dampener . . . . .	98
	Fountain Gear Box . . . . .	100
	Form Roller Arm Gear Side . . . . .	100
	Form Roller Arm Gear Side . . . . .	102
	Form Roller Arm Operator Side . . . . .	104
	Fountain Gear Box . . . . .	106
	Idler Gear . . . . .	106

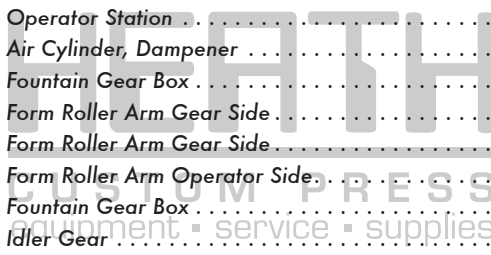

	Idler Gear . . . . .	108
	Roller Hold Down . . . . .	108
	Bushing Housing . . . . .	110
	Air Cylinder, Ductor . . . . .	110
	Ductor Arm . . . . .	112
	Operator Station, Gear Side . . . . .	114
	Solenoid Bank, Second Color . . . . .	114
	Pivot Hub . . . . .	116
	Registration, Second Color . . . . .	116
	Air Cylinder, Hold Open . . . . .	118
	Gear Box, Tolomatic . . . . .	118
	Drive, Second Color . . . . .	120
	Drive, Second Color . . . . .	122
	Washup Tray . . . . .	124
	Operator Station . . . . .	124
<b>4</b>	<b>Imprint Numbering Unit</b>	
	Impression Cylinder . . . . .	128
	Blanker Clamp . . . . .	130
	Impression Blanket Mylar . . . . .	132
	Turret Arm . . . . .	134
	Numbering Shaft . . . . .	136
	Photopolymer Shaft . . . . .	138
	Shaft, Drive Housing . . . . .	140
	Roller Layout, Numbering . . . . .	142
	Keyed Ink Fountain . . . . .	144
	Numbering Gear Side Inner View . . . . .	146
	Numbering Gear Side Inner View . . . . .	148
	Ink Fountain Arm, Gear Side . . . . .	150
	Ink Fountain Arm, Operator Side . . . . .	152
	Form Roller Support, Gear Side . . . . .	154
	Form Roller Support, Operator Side . . . . .	156
	Gear Side View, Numbering . . . . .	158
	Ductor Arm . . . . .	160
	Oscillator Gear Box . . . . .	162
	Operator Station "A" . . . . .	164
	Gear Side View, Numbering . . . . .	166
	Air Cylinder, Impression . . . . .	168
	Air Cylinder, Ductor . . . . .	168
	Bushing Housing . . . . .	170
	Bushing Housing, Indexing . . . . .	172
	Spring Bar . . . . .	172
	Air Cylinder, Indexer . . . . .	174
	Fountain Gearbox . . . . .	174
	Solenoid And Alkon Valve . . . . .	176
	Operator Side View . . . . .	176
	Filter - Regulator . . . . .	178
	Alkon Value . . . . .	178
	Solenoid Bank, Numbering . . . . .	180
	Operator Station . . . . .	182
	Operator Station, Delivery . . . . .	182
	Paddle Assembly . . . . .	184
	Brake Assembly . . . . .	184

<b>5</b>	<b>Base And Drive</b>	
	T-T Base And Drive . . . . .	188
	T-T-T Base And Drive . . . . .	190
	O-T Base And Drive . . . . .	192
	O-T-T Base And Drive 194	
	2 C-O-T Base And Drive . . . . .	196
	2C-O-T-T Base And Drive . . . . .	196
	Idler Assembly . . . . .	200
	Idler Assembly . . . . .	200
<b>6</b>	<b>Covers And Guards</b>	
	T-T Covers . . . . .	204
	T-T-T Covers . . . . .	206
	O-T Covers . . . . .	208
	O-T-T Covers . . . . .	210
	2C-O-T Covers . . . . .	212
	2C-O-T-T Covers . . . . .	214
	Guard, Offset Dual Stream . . . . .	216
	Guard, Offset. . . . .	218
	Guard, Offset. . . . .	220
	Guard, Numbering Dual Stream . . . . .	222
	Guard, Numbering . . . . .	224
<b>7</b>	<b>Electrical System</b>	
	Power Box, Fenner, AC . . . . .	228
	Power Box, Fenner, AC . . . . .	230
	I/O Enclosure, T-T, O-T, 2C-O-T. . . . .	232
	Motion Control Relay Board . . . . .	232
	Interconnect Cable . . . . .	234
	Filter Cap, 24 Volt . . . . .	234
	24 Volt Power Supply . . . . .	236
	Tractor Jumper Cable . . . . .	236
	Delivery Light . . . . .	238
	Power Box, Pmi. . . . .	238
	Relay Box. . . . .	240
	Power Box, Pmi. . . . .	240
<b>8</b>	<b>Numbering And Imprint Tractor</b>	
	Numbering Tractor Pmi. . . . .	244
	Numbering Tractor Fenner . . . . .	266
	Numbering Encoder Adjustment . . . . .	270
	Numbering Encoder Adjustment . . . . .	272
<b>9</b>	<b>Offset Tractor</b>	
	Offset Tractor Pmi . . . . .	276
	Offset Encoder Adjustment . . . . .	300
	Offset Encoder Adjustment . . . . .	302
	Tractor Rebuild. . . . .	304
<b>10</b>	<b>Pneumatics</b>	
	T-T Air Schematic . . . . .	306
	T-T-T Air Schematic . . . . .	308
	O-T Air Schematic . . . . .	310
	O-T-T Air Schematic. . . . .	312
	2C-O-T Air Schematic . . . . .	314
	2C-O-T-T Air Schematic. . . . .	316
<b>11</b>	<b>Stacker Assembly</b>	
	Stacker . . . . .	320

